

POT & PAN EZ

Manual Dish Detergent



DIRTY DISHES? DO THEM ON THE DOUBLE!

POT AND PAN EZ uses a concentrated, high-suds formula to remove grease and food soil from dishes and utensils, while leaving hands soft and clean.

- Removes Grease & Food Soil from Dishes & Utensils
- Concentrated, High-suds Formula
- Leaves Hands Soft & Clean

CONCENTRATED, HIGH-SUDS FORMULA!



WHERE TO USE

- DISHES
- GLASSWARE
- UTENSILS
- POTS
- PANS

DIRECTIONS

READ ENTIRE PRODUCT LABEL PRIOR TO USE.

DISHES, GLASSWARE & UTENSILS: Dilute 2 parts **POT AND PAN EZ** to each full sink of water. Allow water to run with force until sink is filled to the usual level. Wash dishes, rinse, and let air dry.

GREASY POTS & PANS: Dilute 1 tablespoon of **POT AND PAN EZ** to each pot/pan and fill with hot water. Allow product to dwell for several minutes, then wash and rinse as usual.

MANUAL DISH WASHING: Dilute 1/4 OZ **POT AND PAN EZ** to 1 GL water.

AUTOMATIC BAR GLASS SCRUBBERS: Dilute 1/4 OZ **POT AND PAN EZ** to 2 GL water.

TECHNICAL DETAILS

SIZE	PACKAGING	LIQUID COLOR
1 GL	4/1 GL CASE	BLUE
5 GL	PAIL	BLUE

Have a whole lot more to clean?

Call us today to learn about our line of products!

1-877-4-EMULSO