ALTENPERATURE DETERGENT Dish Machine Detergent

DISH DETERGENT DOING YOU DIRTY?

You need a detergent that works as hard as you. Every time you run your machine, your dishware and utensils should come out of the wash sparkling clean.

Emulso's **ALL-TEMPERATURE DETERGENT** uses a concentrated, nonchlorinated formula to remove food debris and improve rinsability in dish machines, ensuring sparkling clean cutlery after every wash cycle.

Removes Caked-on Food Debris

Improves Rinsability

Non-chlorinated, Non-foaming
Biodegradable

EXCELLENT PERFORMANCE IN: WATER CONDITIONING | SOIL SUSPENSION | RINSABILITY



WHERE TO USE

• HIGH TEMPERATURE DISH MACHINES • LOW TEMPERATURE DISH MACHINES

DIRECTIONS

READ ENTIRE PRODUCT LABEL PRIOR TO USE.

Place pickup tube from dish machine dispensing system into product container. **ALL TEMPERATURE DETERGENT** will be automatically injected during the wash cycle. Follow instructions on your dish machine procedures poster or consult your Service Representative for additional information.

TECHNICAL DETAILS

PART NUMBER	SIZE	PACKAGING	LIQUID COLOR
D16-4CS	1 GL	4/1 GL CASE	RED
D16-5G	5 GL	PAIL	RED

emulso

emulso

ALL TEMPERATURE DETERGENT

Wirner Brobin

emulso

ALL TEMPERATURE DETERGENT

NACHINE DETERSEN